

Berlin Gardens' outdoor furniture and fabric cleaners give maximum results with minimal effort. Each product cleans safely yet effectively.



Furniture Care and Maintenance

Poly furniture is made from high-density polyethylene (HDPE), a recyclable plastic that never needs to be painted or stained. It will not rot or splinter, and contains added UV protection to resist fading.

Thanks to its resilient properties, most furniture only needs to be cleaned a few times per year. Light colors, such as white, may require more frequent cleaning to keep it looking new. To maintain the beauty of your furniture:

- Do not place flower pots or any items on furniture that will leave stains.
- · Do not place hot items directly onto furniture to avoid melting.
- · Wash furniture regularly with Berlin Gardens cleaners or non-abrasive soap and water.
- For deep cleaning, spray thoroughly with a non-abrasive cleaner, then scrub the furniture with a soft bristle brush and rinse with warm water.
- If needed, spray the furniture with a non-abrasive cleaner and wash it using a high-pressure washer. Keep the tip of your pressure washer 16" to 20" away from your furniture to avoid damaging the material.

All of our fasteners are made from stainless steel - most of which are chrome-plated and highly corrosion-resistant. However, in extreme conditions such as coastal areas, some corrosion may still occur. To ensure the longevity of your furniture and fasteners, we recommend regularly rinsing it with fresh water.

If properly cared for, you'll be able to relax in your poly furniture for years to come!