


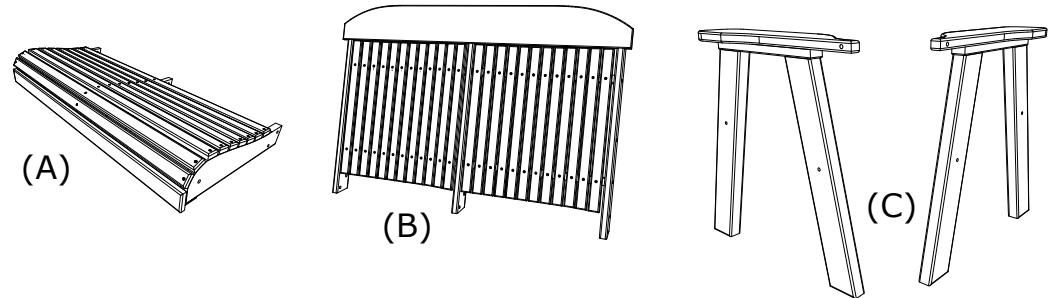

**Parts List**

- 1 - (A) Seat Assembly
  - 1 - (B) Back Assembly
  - 2 - (C) Armrest Assemblies
- Hardware**
- 2 - 3 1/2" Stainless Wafer Bolt
  - 2 - 2 1/2" Stainless Wafer Bolt
  - 6 - 2" Stainless Wafer Bolt
  - 4 - 2" Screws
  - 1 - 5/32 Hex Key




**Tools Required**

5/32 Hex Key (Included)

#2 Square Drive Bit (Not Included)

**1.** Assemble (B) Back Assembly to (A) Seat Assembly using 4 - 2" Wafer Bolts, Tighten with included Hex Key. Be sure to match all numbers & or letters.

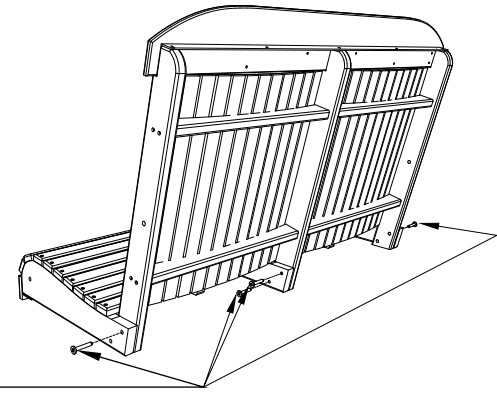

2" Stainless Wafer Bolt

**2.** Assemble (C) Armrest Assemblies using 1 - 3 1/2" Wafer Bolt, 1 - 2 1/2" Wafer Bolt, 1 - 2" Wafer Bolt per side, Tighten with included Hex Key. Be sure to match all numbers & or letters.




2 1/2" Stainless Wafer Bolt

2" Stainless Wafer Bolt

3 1/2" Stainless Wafer Bolt

**3.** Install 2 - 2" Screws per side from inside of seat in predrilled holes.

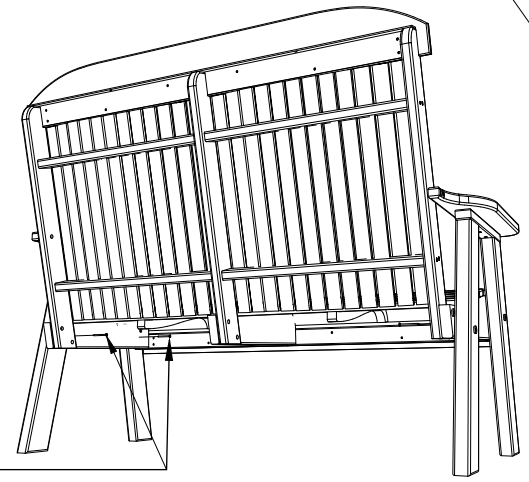

2" Screw



4' Classic Poly Bench Assembly Instructions

12/10/ 2019

R.M.