



Comfo Upright Adirondack
Adirondack vertical Comfo
CÓMODO Adirondack vertical

Assembly Instructions
instructions de montage
Instrucciones de montaje


BERLIN
GARDENS

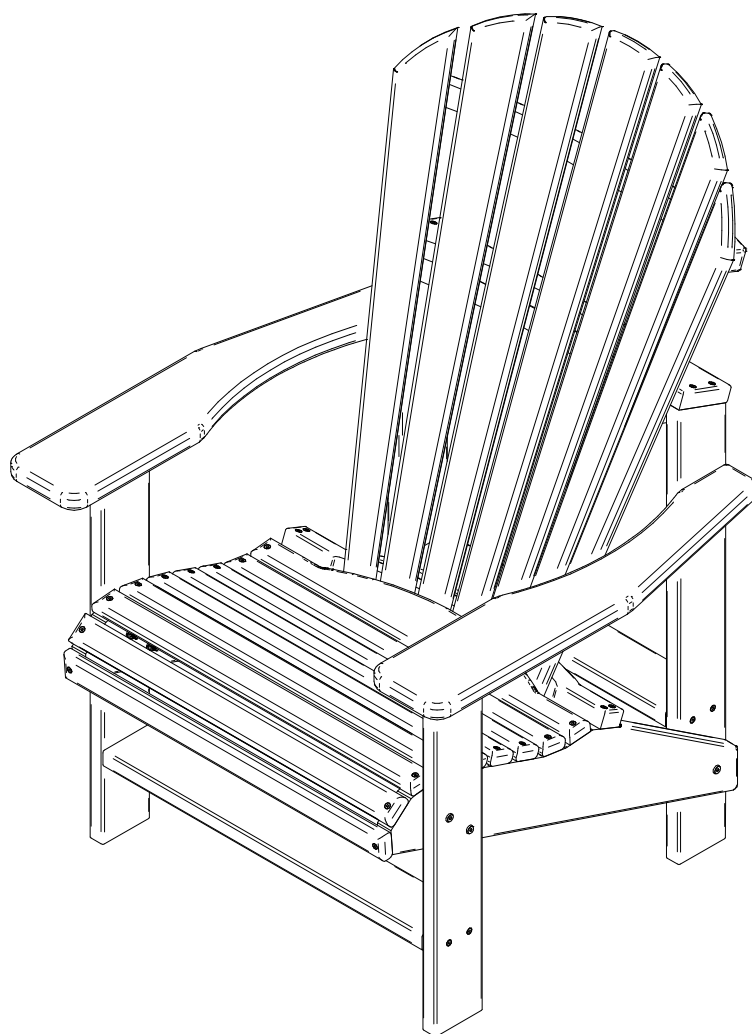

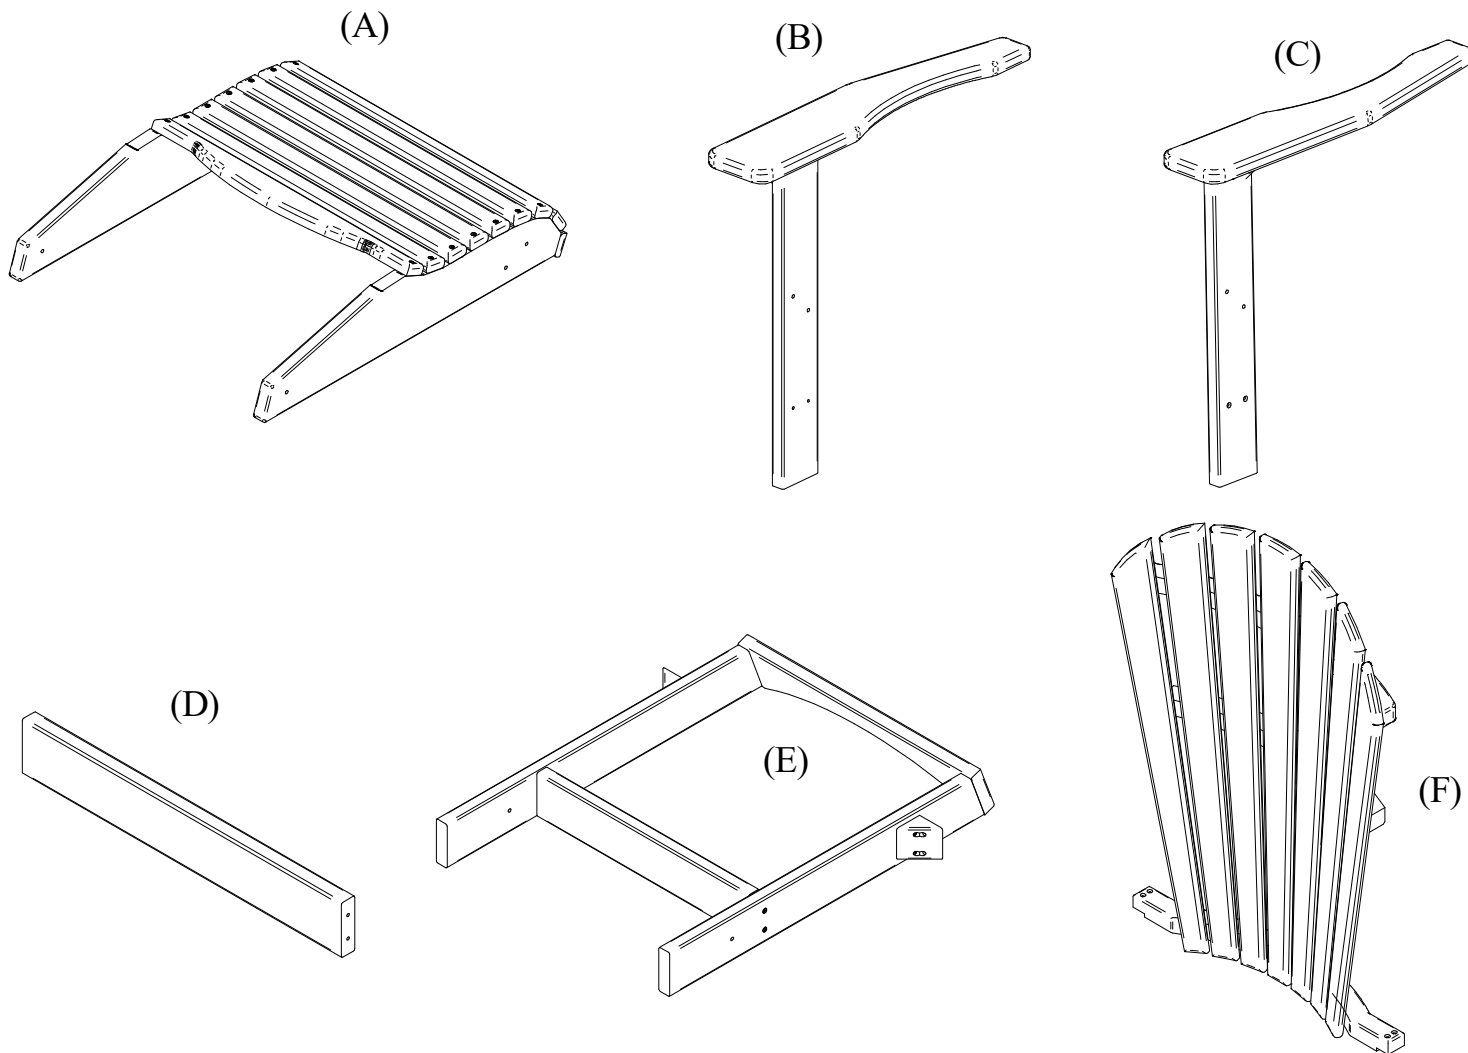


Hardware Included
Matériel inclus
Herrajes incluidos


(38200) x12



(38112) x4




(214212) x6




(9532) x1



(6114) x6




Items Not Included
Articles non inclus
Artículos no incluidos

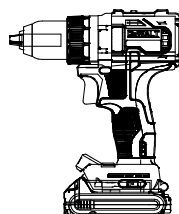





#2 Square Drive Bit
Embout d'entraînement carré #2
Punta cuadrada n.º 2





7/16 in. wrench
Clé de 7/16 po
Llave de 7/16 pulg.






1 (A)
(B)
(C)
(D)

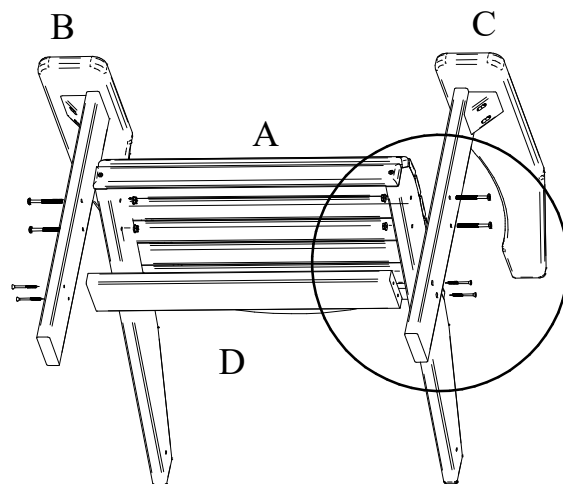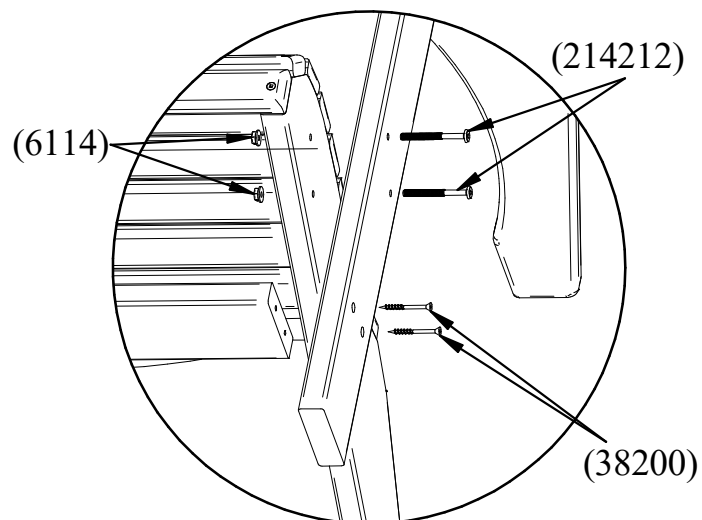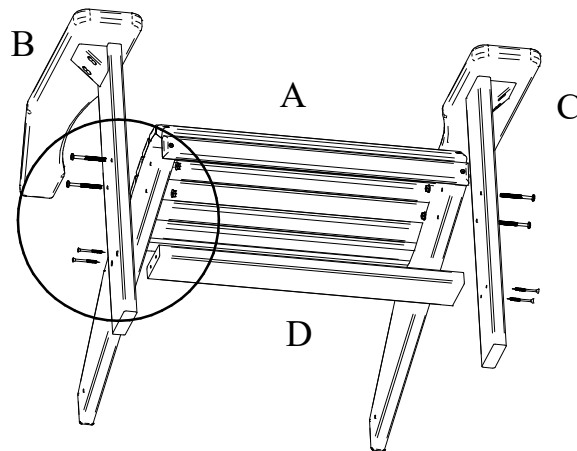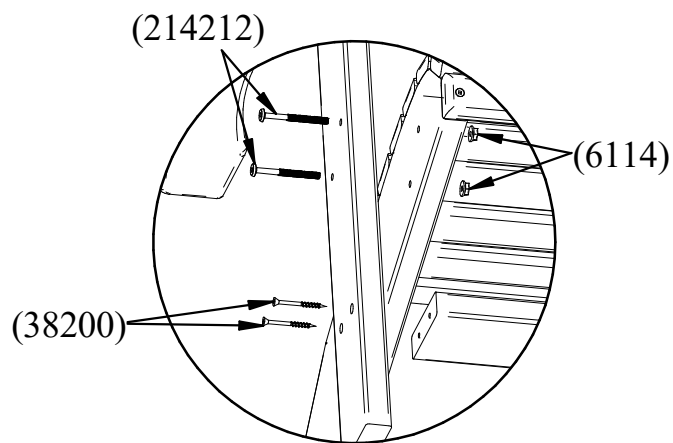



2 (E)

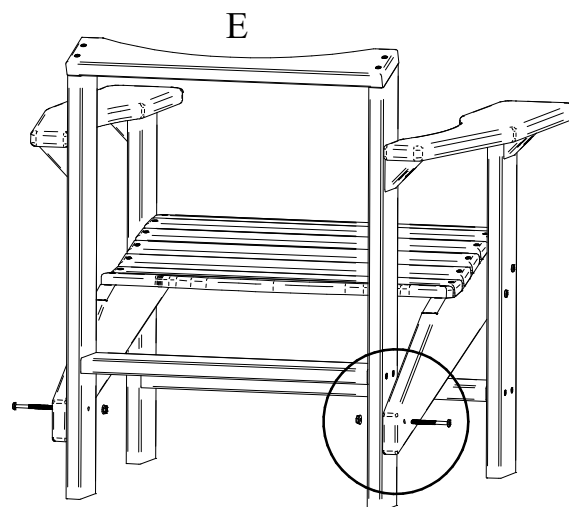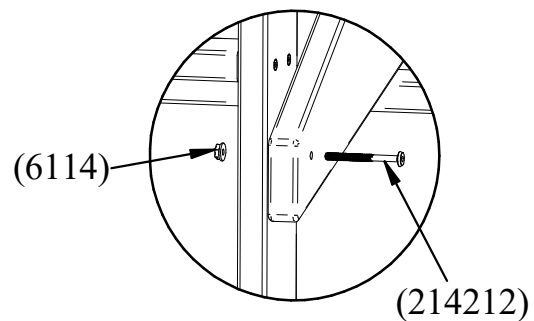

3

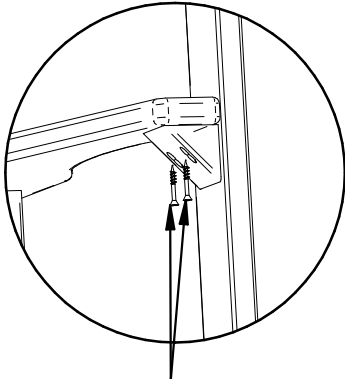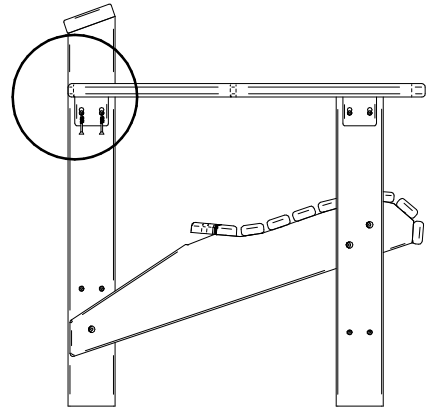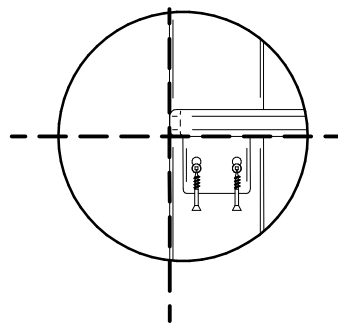


(38112)

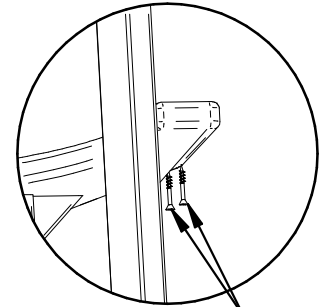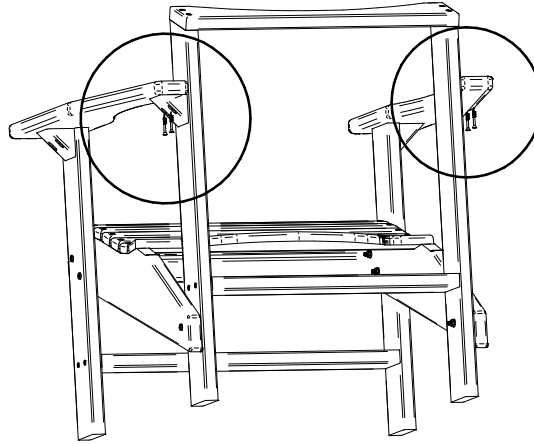



(38112)

4 (F)

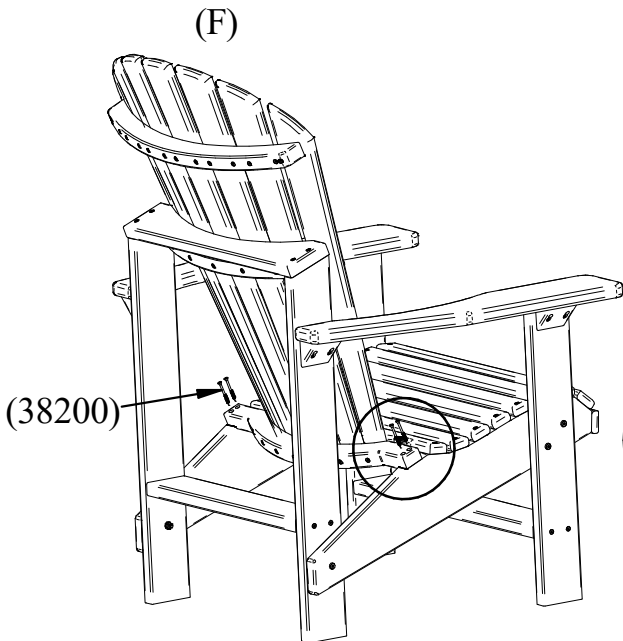


(38200)

(38200)

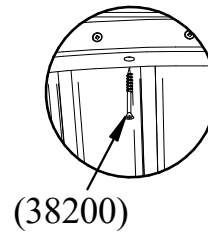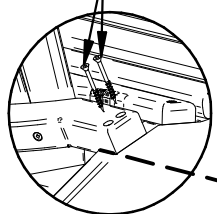

(38200)

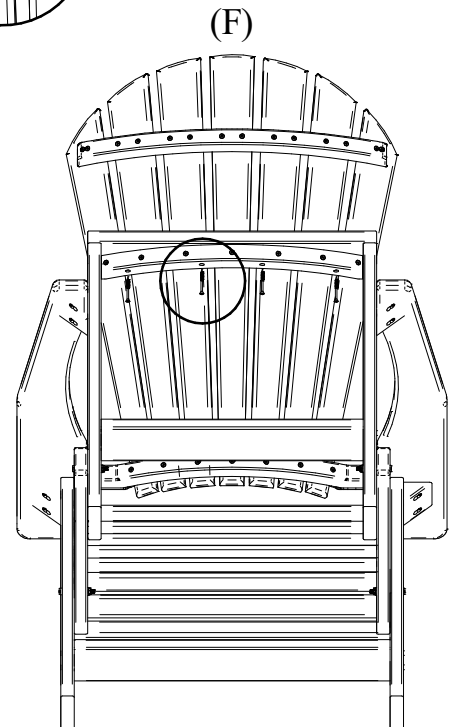

(F)