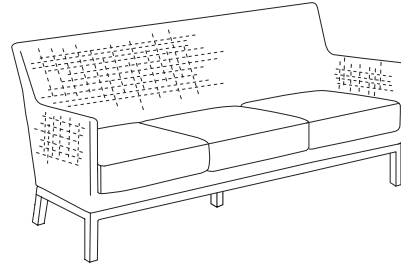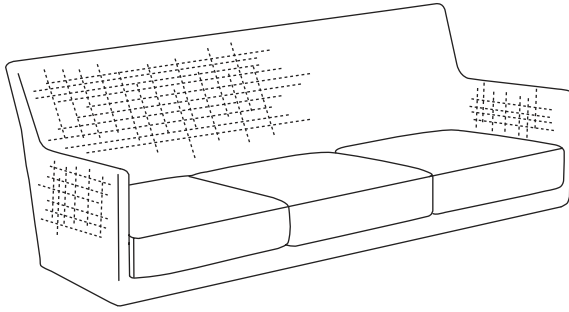# OXFORD G GARDEN®

ARGENTO SOFA
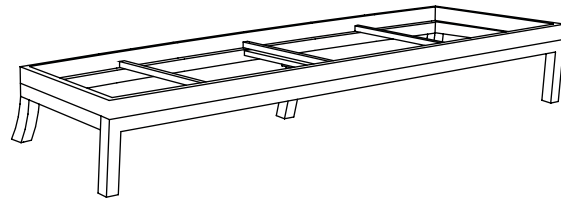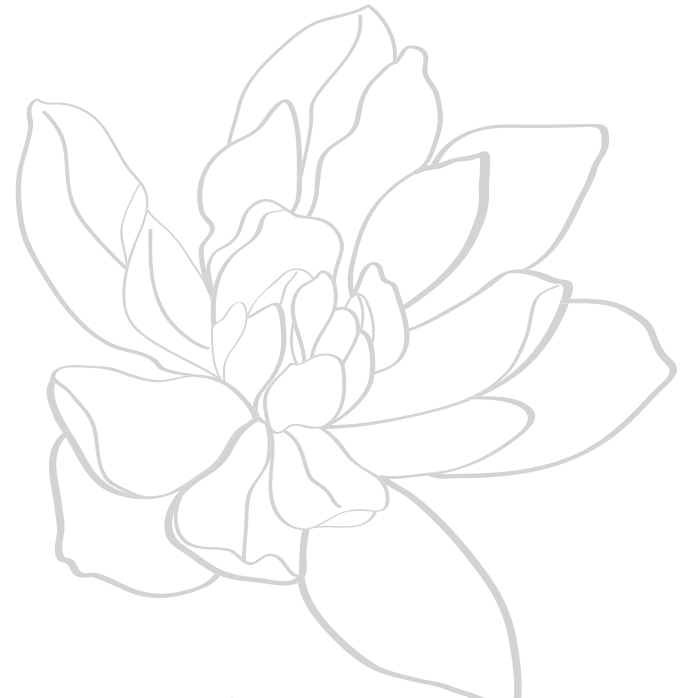# ASSEMBLY INSTRUCTIONS
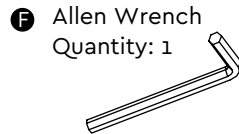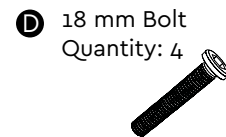
COMPONENTS

① Seat Assembly

② Leg Assembly

HARDWARE

A 25 mm Short Bolt
Quantity: 2

B 35 mm Long Bolt
Quantity: 3

C 45 mm Long Bolt
Quantity: 1

D 18 mm Bolt
Quantity: 4

E Flat Washer
Quantity: 10

F Allen Wrench
Quantity: 1
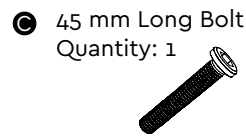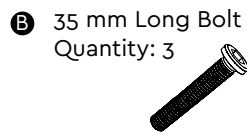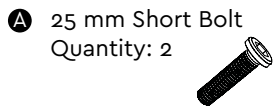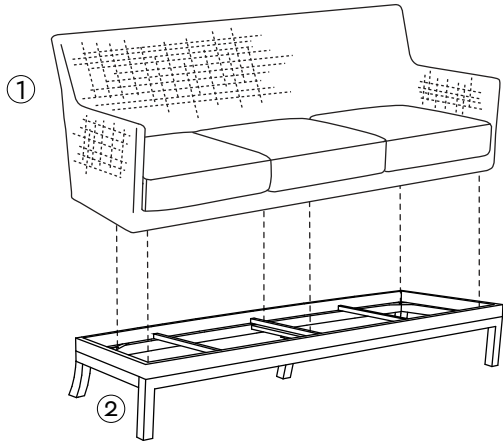
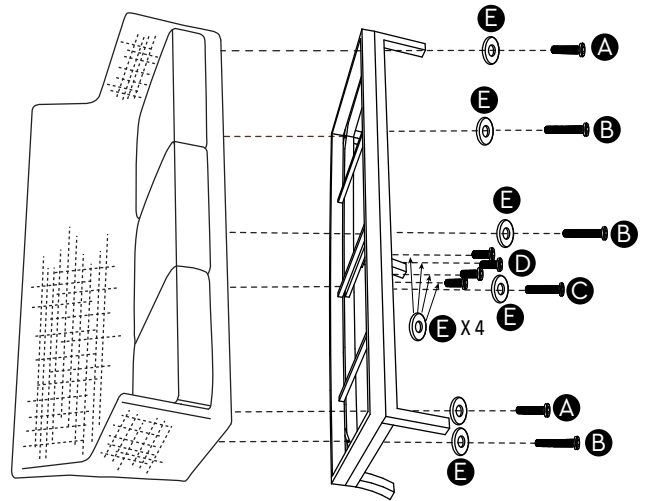## Thoughtful Design **MADE RIGHT**

INSTRUCTIONS

STEP 1

Line up Sofa Seat Assembly ① onto Leg Assembly ② to the pre drilled holes on the seat assembly as shown.

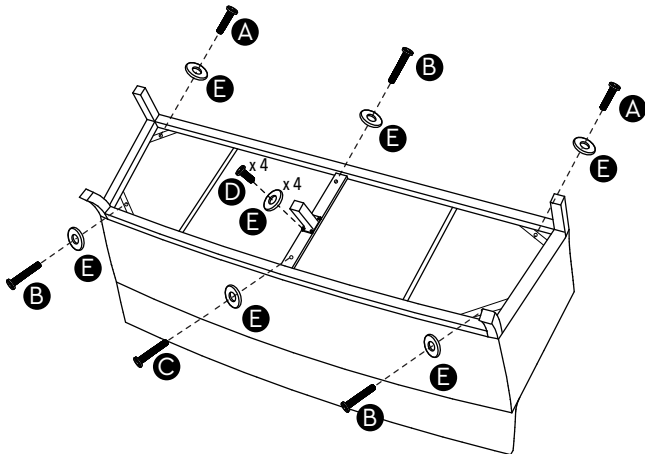Note: Curved part of leg assembly lines up with the back of the chair.

STEP 2

Place washer **E** on bolts, **A**, **B**, **C**, & **D**. Next, hand tighten bolts into the pre drilled holes as shown. Repeat for all bolts.
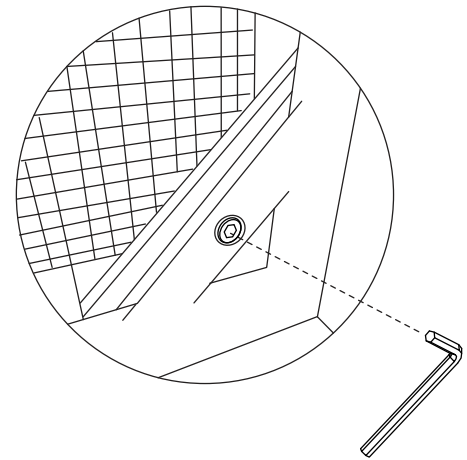
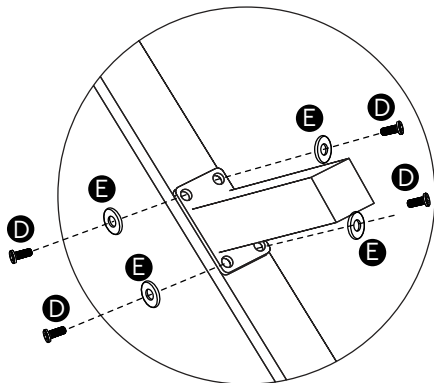

Step 2 Detail
Alternate underside view

Step 3
Tighten all four bolts with the allen wrench provided.

Step 3 Detail
Underside view middle leg.

STEP 4
Turn upright and enjoy!